


Used to read the water level on the feeding Tank

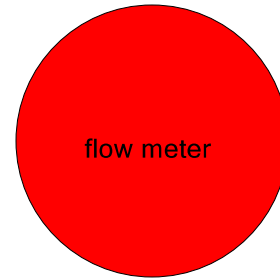

HYDROPONIQUE Machine Controle and HMI V0.1